



Air Monitor 1 Non-Working Hours

East of CA, Downwind of CA Material Placement

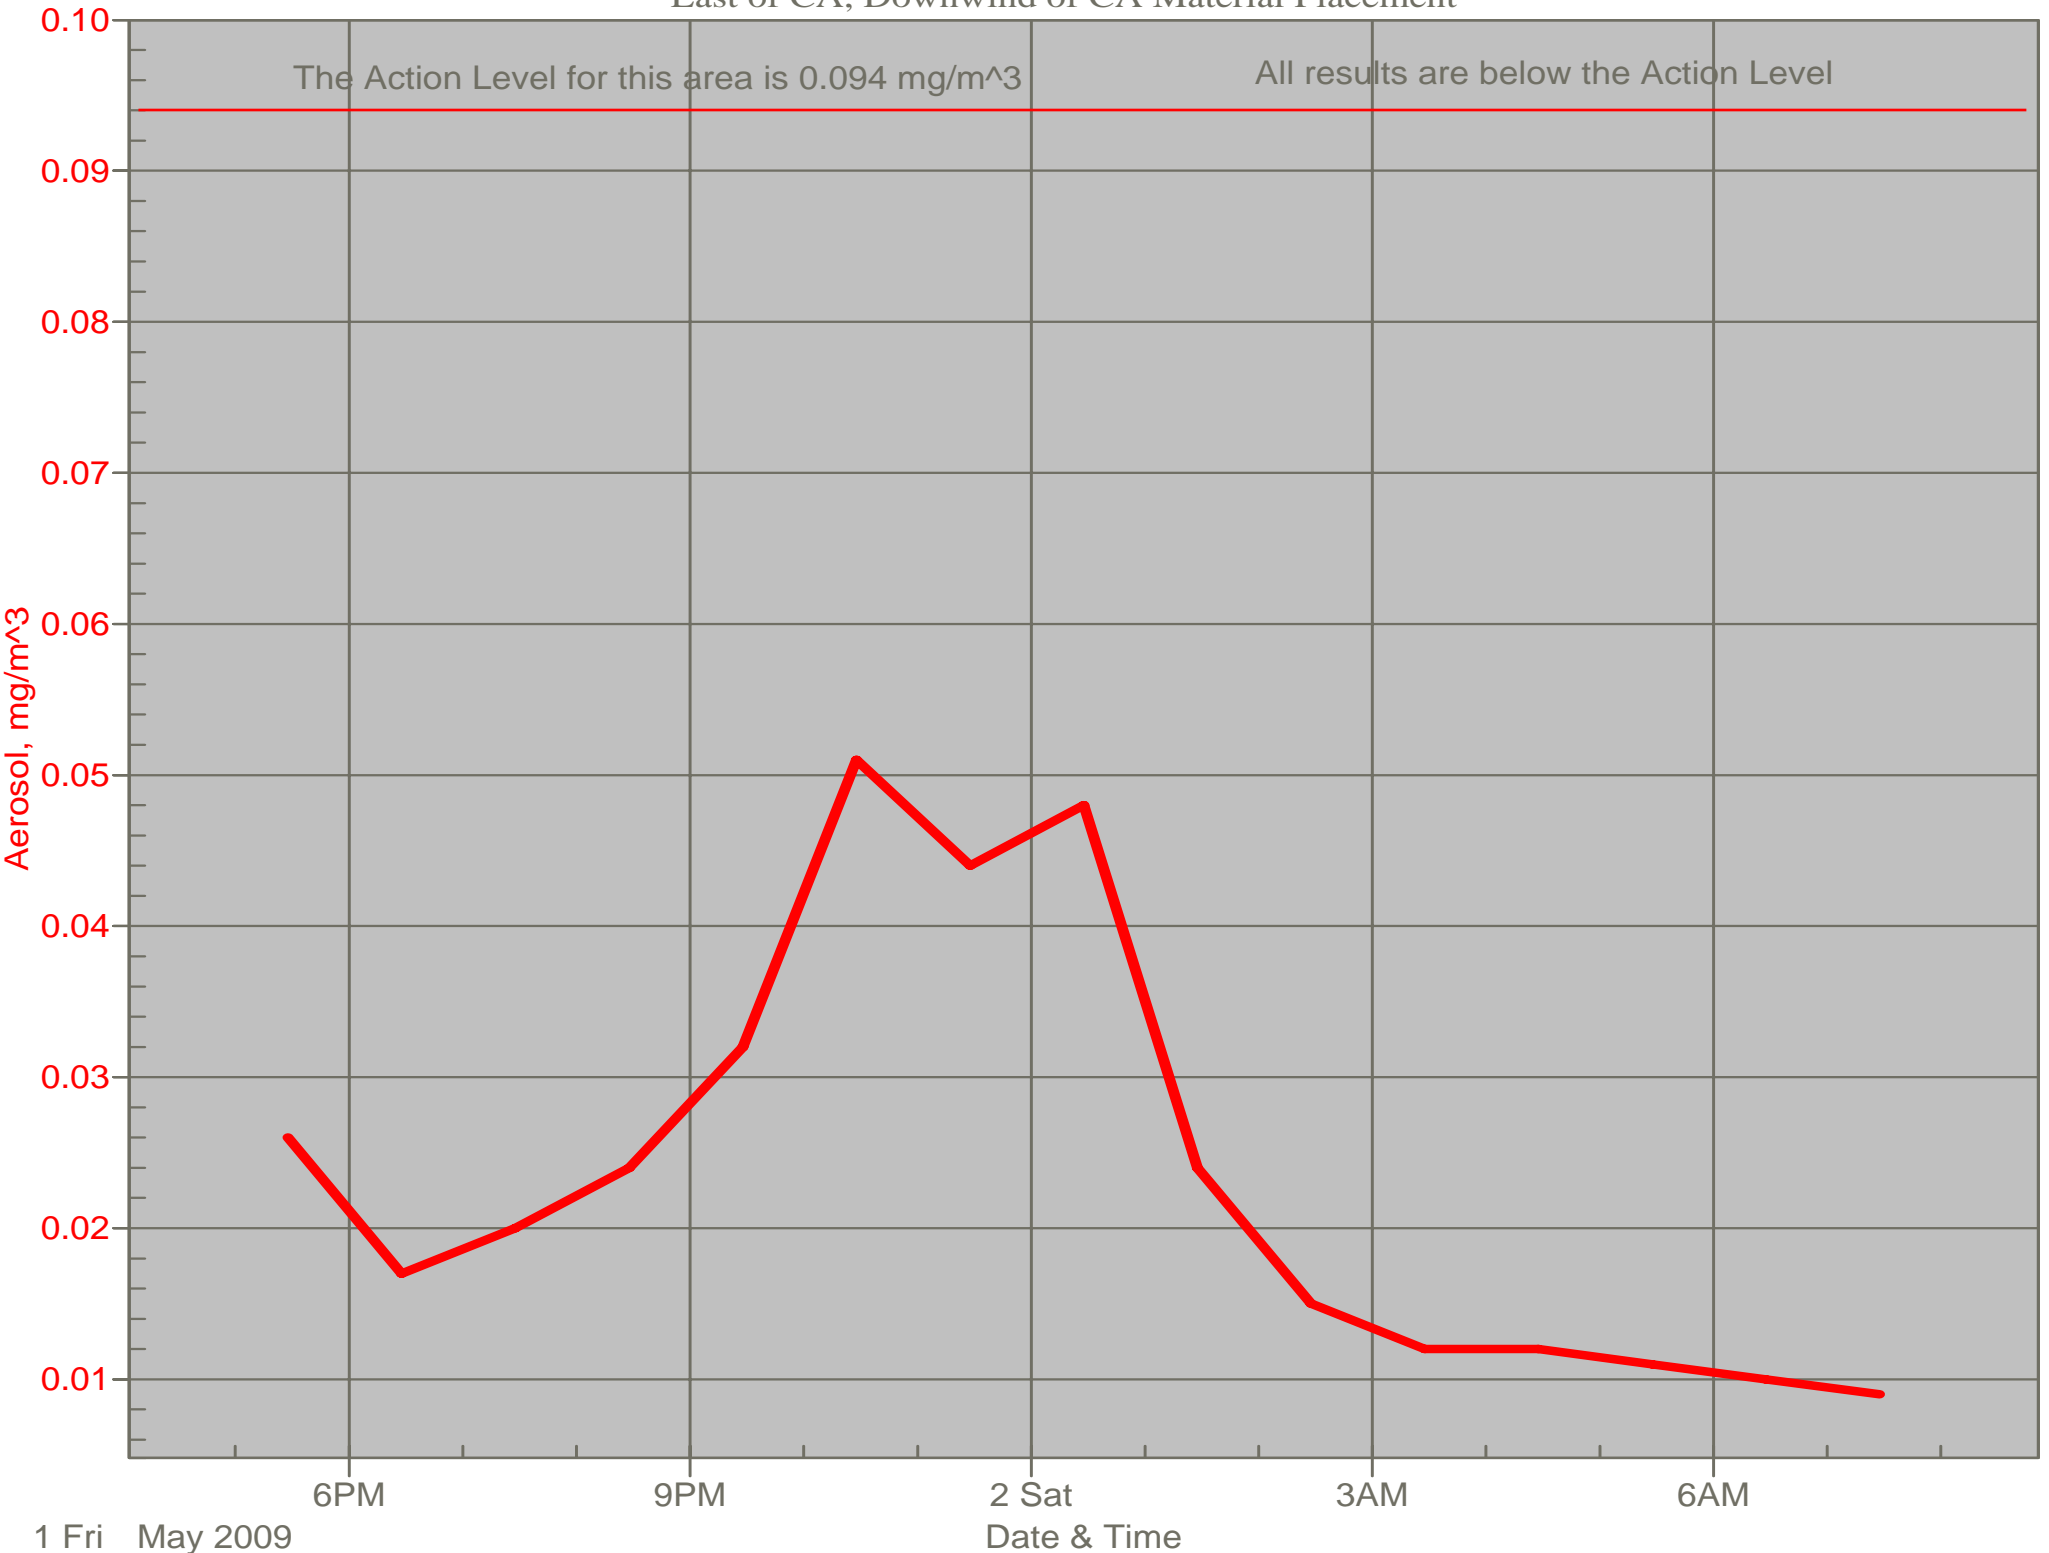


Air Monitor 3 Non-Working Hours

East of Area O, Downwind of Excavation Area O

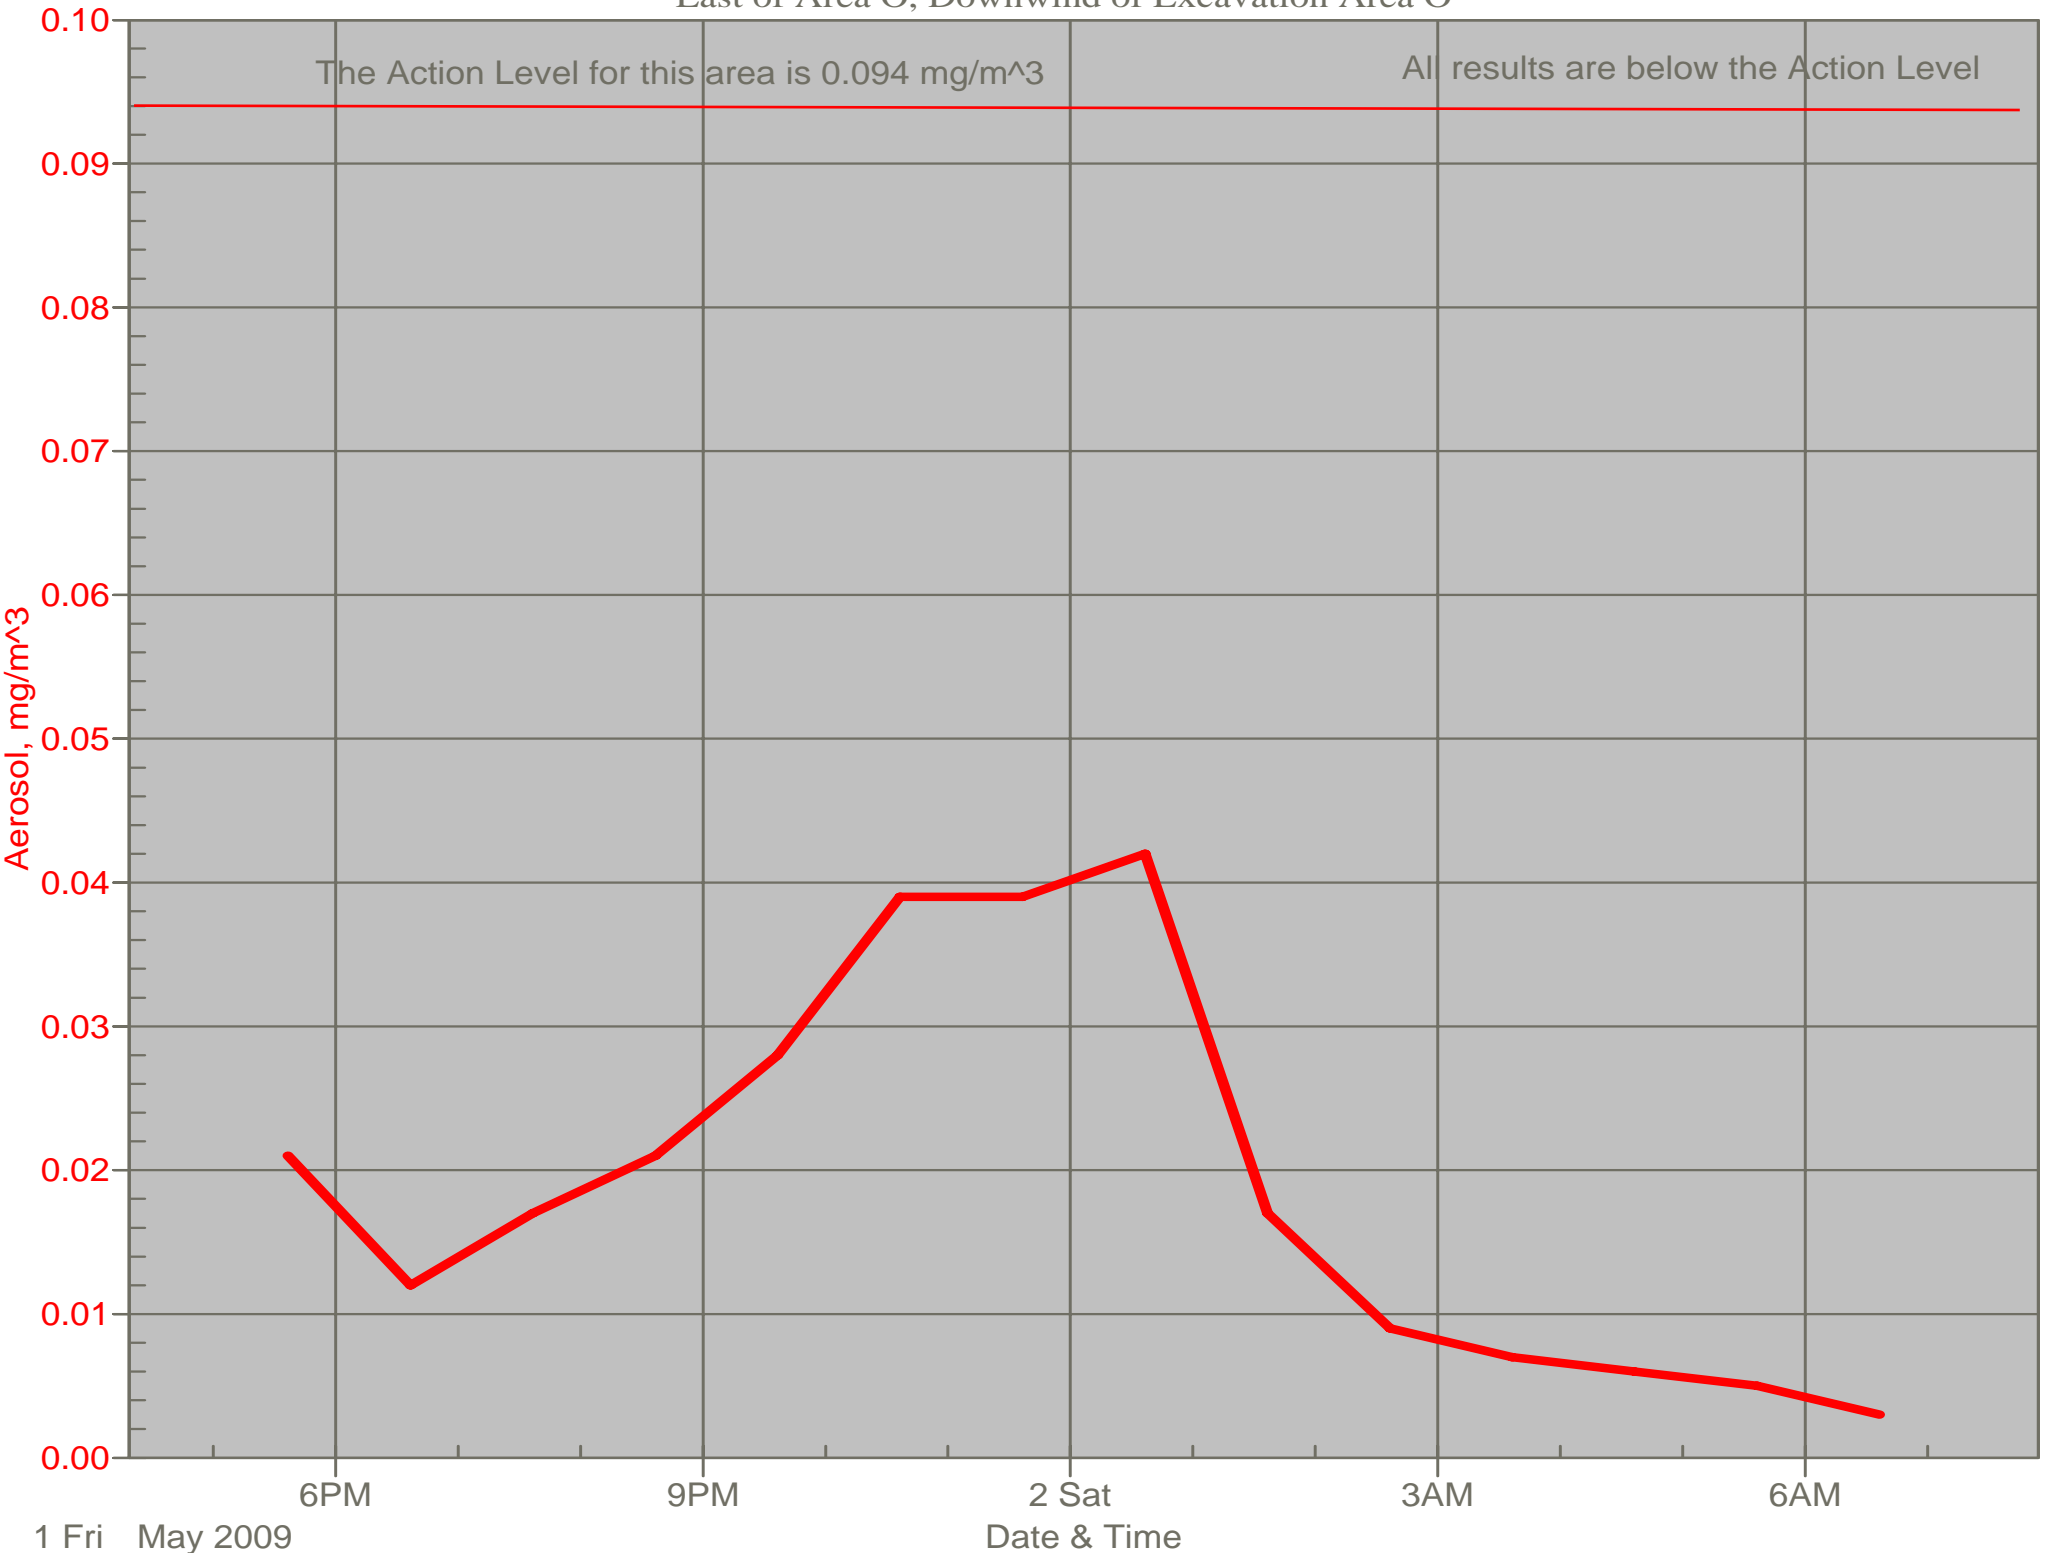

Air Monitor 4 Non-Working Hours

Southwest of CA, Upwind of Site

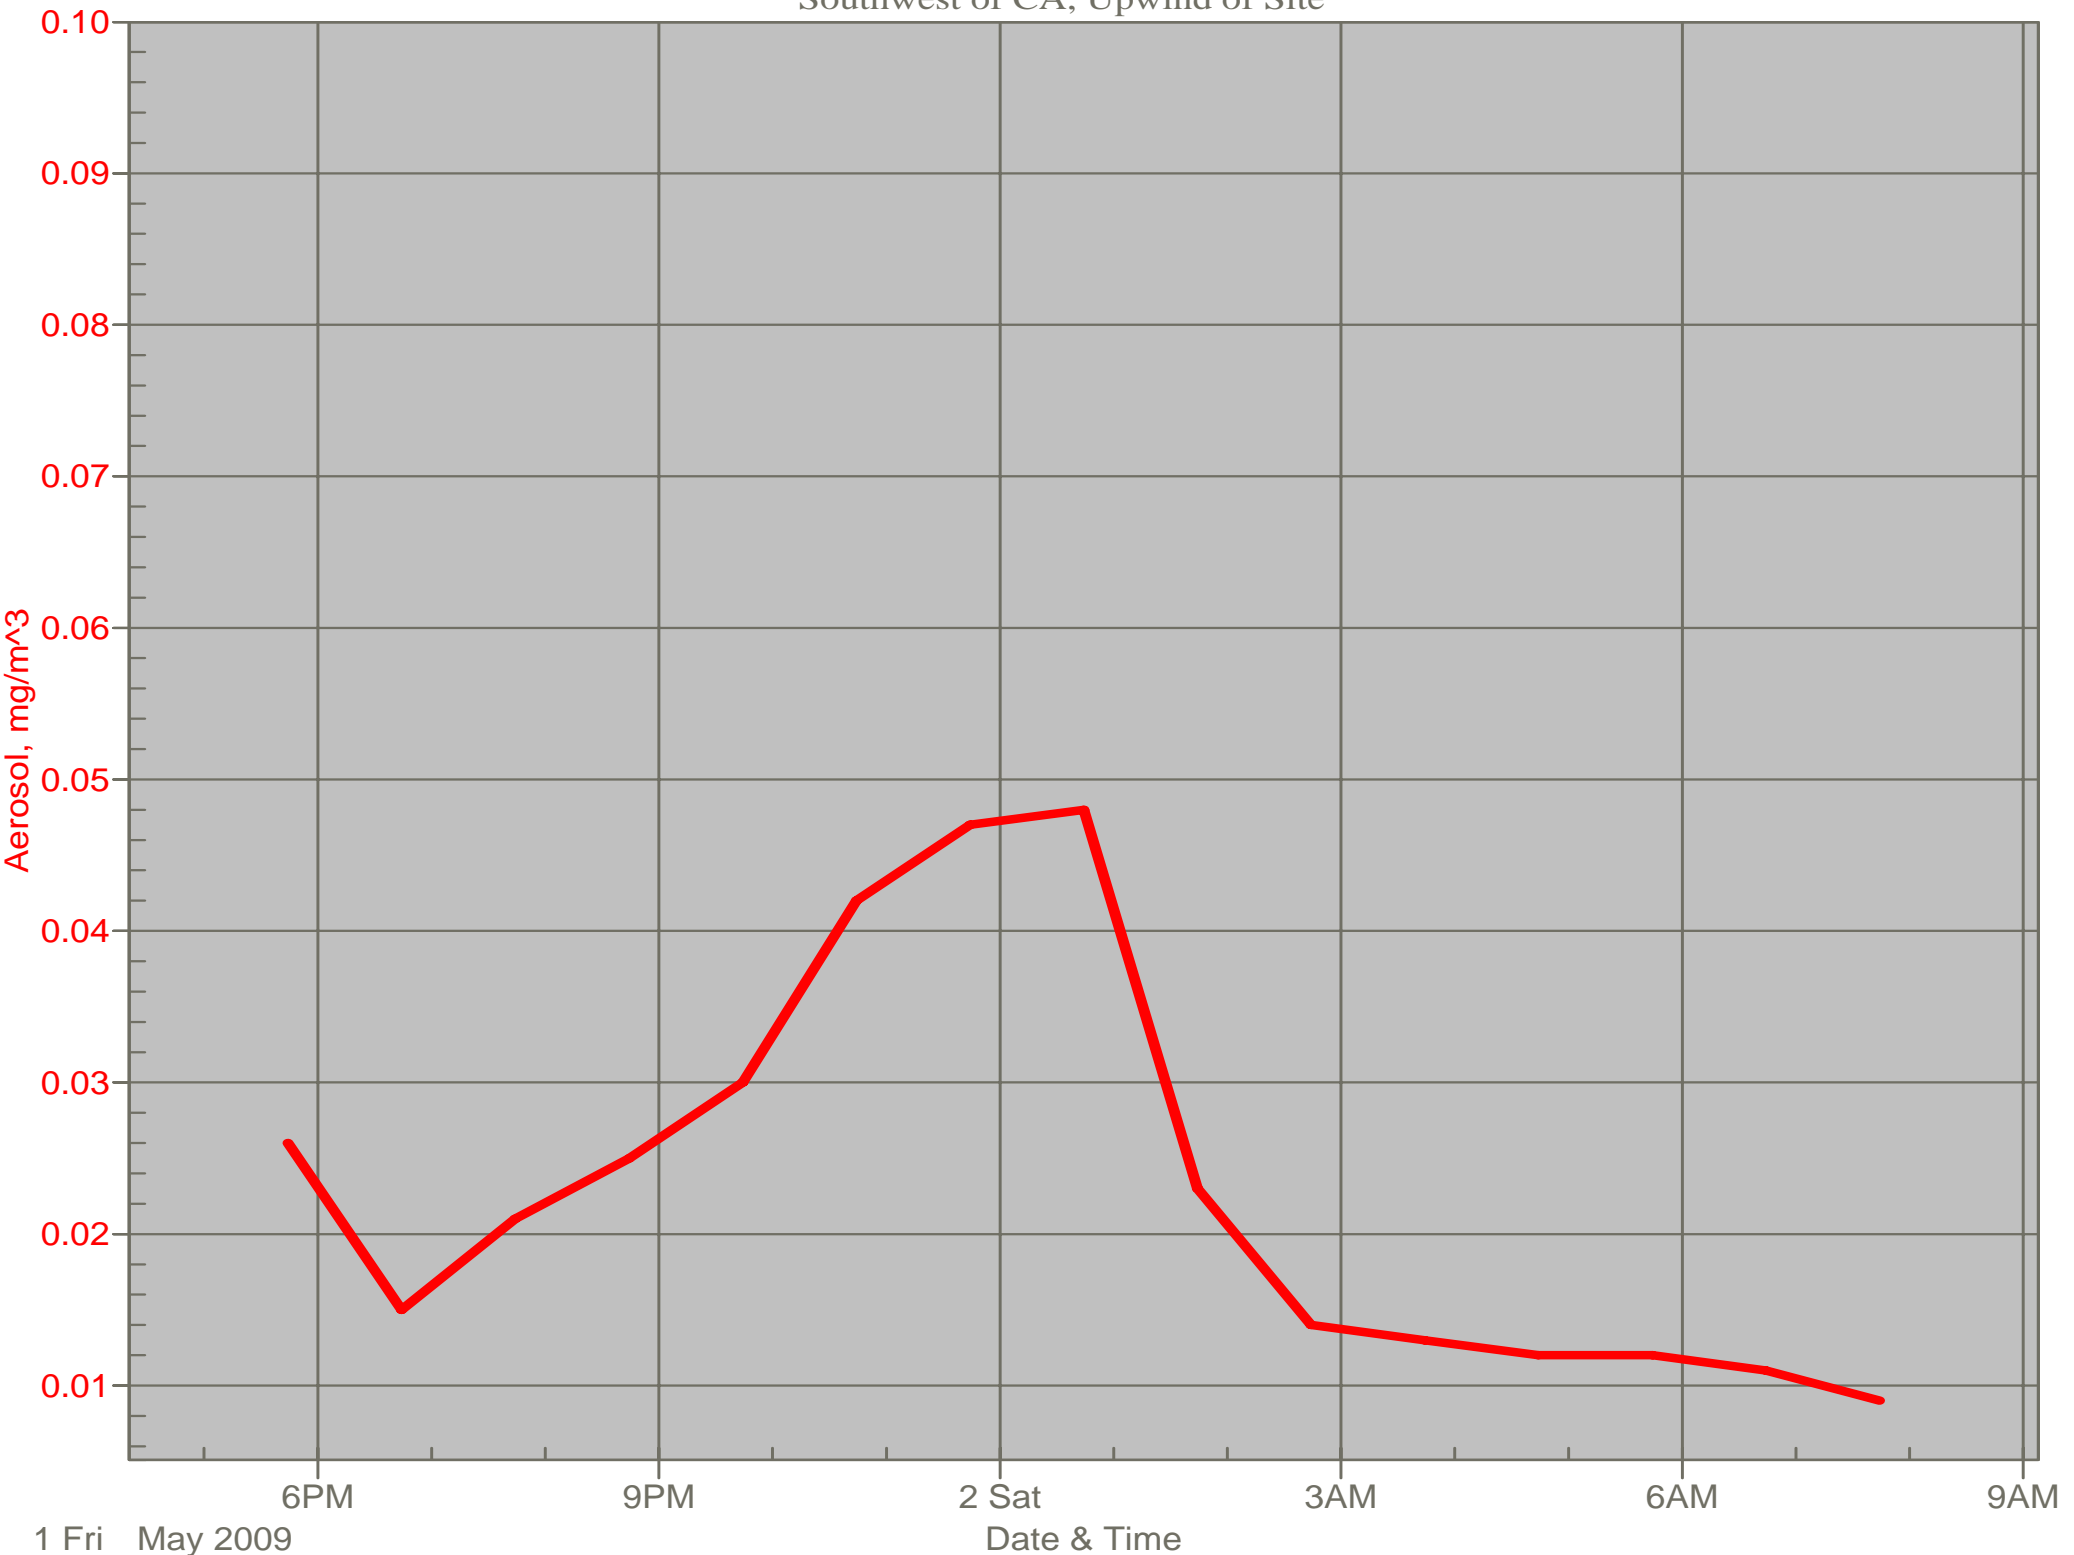

Air Monitor 6 Non-Working Hours

South of CA, Sulphur Creek Monitoring

